

HOW TO USE THIS CHART

For proper repair unit selection, determine the size of the injury in the tyre by measuring largest cord area removed. Locate the correct injury size along the top horizontal Row of this chart. Now locate the tyre's ply rating/load range along the extreme left column of the same chart. The repair unit number in the square where these two intersect is the proper repair unit to use. This chart is available as a Large Wall Chart to place in your repair area. Ask your supplier or contact : Unipatch Rubber Limited, Khemka House, 10, Community Centre, Saket, New Delhi -110 017.

A-B Non-Repairable Area	
7.00-8.75	3¼", 80mm
9.00-14.00	4", 100mm
16.00-18.00	5", 125mm
21.00-27.00	6", 150mm
<i>The above dimensions are guidelines only.</i>	

Tractor A-B Non-Repairable Area	
14.9-20.8	4", 100mm
23.1-larger	5", 125mm
<i>The above dimensions are guidelines only.</i>	



CAR, TRUCK AND EARTHMOVER SIZE OF INJURY- TREAD, SHOULDER AND SIDEWALL

PLY RATING (LOAD)	MM	10	15	20	25	40	50	65	75	100	125
	Inch	¾"	½"	¾"	1"	1½"	2"	2½"	3"	4"	5"
4				V-3	V-3	V-4	V-5	V-6			
6				V-3	V-3	V-4	V-5	V-6			
8				V-3	V-4	V-4	V-5	V-6			
10			V-3	V-3	V-4	V-5	V-6	V-6	V-7	V-8	
12			V-4	V-4	V-4	V-5	V-6	V-6	V-7	V-8	
14	V-3	V-4	V-4	V-4	V-5	V-6	V-6	V-7	V-7	V-8	V-10
16	V-4	V-4	V-4	V-5	V-5	V-6	V-6	V-7	V-7	V-8	V-10
18	V-4	V-5	V-5	V-5	V-6	V-6	V-7	V-8	V-8	V-9	V-10
20	V-4	V-5	V-5	V-6	V-6	V-7	V-8	V-8	V-9	V-9	V-10
22	V-4	V-6	V-6	V-7	V-7	V-8	V-8	V-8	V-9	V-10	
24	V-4	V-6	V-6	V-7	V-7	V-8	V-8	V-8	V-9	V-10	